

Instructions for use

Type K und KE


Setting up the work tent

1. The work tents from Trotec all come with a robust carry bag




2. Take the tent out of the carry bag and lay it out on the ground in front of you. The tent does not necessarily have to be set up at the location where it is later needed.

The tent can be easily transported to the location before being weighted down.

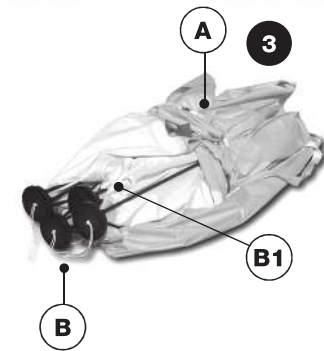



3. Locate the opening flap (A), which is at the end of the zip and set the tent out so that the opening flap (A) and the four fixation discs (B) are lying out in front of you (see graphic). Please ensure that the fixation discs with the "short" rods (B1) is on top of the other three fixation discs.

4. Hold the opening flap (A) in one hand and the top "short" fixation disc (B1) in the other hand.

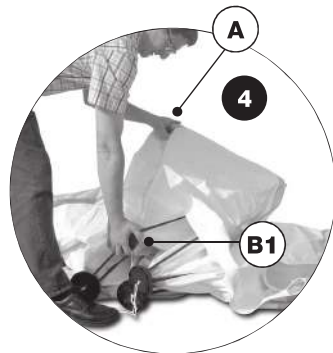


5. Hold on to the opening flap (A) and at the same time push the "short" fixation disc (B1) upwards while standing up.

The fixation disc are connected to the tent walls and the tent rods and therefore automatically force the rods into their intended position. The "short" fixation disc (B1) now forms the centre of the tent top.

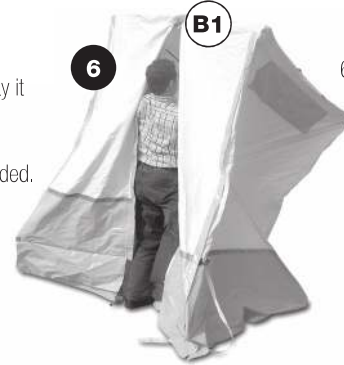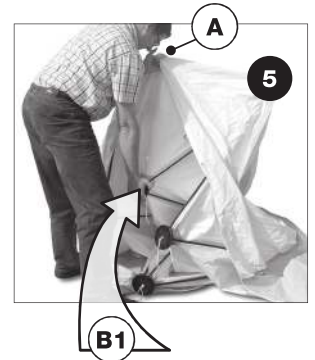

6. Now push the short fixation disc (B1) all the way through so that the tent top is now stretched taut.

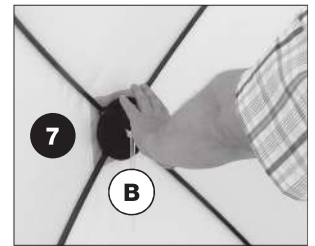

7. Now push the other fixation discs (B) out towards the tent walls so that the side frames are also under tension.



8. The tent is now finished and ready to be weighted down at the site where it is needed.

To do so place one or more suitable objects onto the floor flaps (C) or anchor the tent to the ground using pegs or guy ropes

Taking the work tent down

9. To slacken the tension on the rod frame, first pull the fixation discs inwards towards you. Then relieve the tension at the top of the tent by pulling the tent top fixation disc downwards while stepping backwards out of the tent.

10. Fold the tent together on the ground and put it back into the carry bag.



Instructions regarding cleaning, maintenance, storage and repair of your Trotec work tent

Cleaning

The tent is made of very durable and resilient polyester cloth. Use water only to clean. Do not use any detergents or soap solutions, even when the tent is heavily soiled.

Maintenance

The material of the tent and the fiberglass rods are maintenance free.

Storage

For reasons of hygiene and in order to ensure a long product life, the tent has to be completely dry before it is returned to the carry bag and put into storage. If bad or wet weather prevent the tent from drying, then the tent should be put up again immediately, or within 12 hours at the latest, so that it is given a chance to dry. Stains can form on the material if the tent is not allowed to dry properly.

Repair work

Any holes or tears in the tent that may occur while work is being carried out can be repaired using the tent repair set which is available

Warning! Please make sure that the safety notice regarding the fixation discs overleaf is observed at all times !

No part of this publication may be reproduced, processed using electronic systems, replicated or distributed in any way without prior permission in writing by us. Subject to technical modifications. All rights reserved. These operating instructions were compiled with all due care and attention. We accept no liability for errors or omissions.